



# UniDropper LENA 10ml, 15ml, 30ml assembling


## Supplying

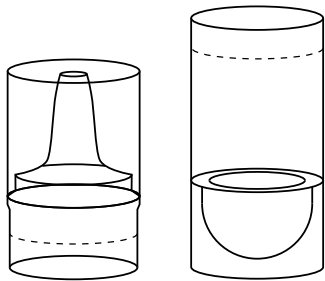


UniDropper LENA dispensers consist of two elements: Dropper with assembled Screw cap & Container with Rubber push button.


## Filling

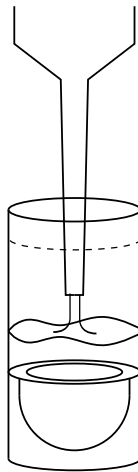


We recommend to use a pipette for filling the Container to avoid polluting the contact area between the Container and the Dropper. 

Please check after filling if the contact area is clean and dry. If not, clean this area until it's dry and clean. 

## Closing

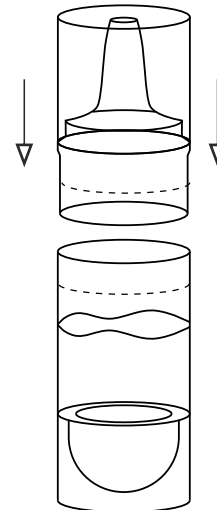

For snapping the Dropper with the Screw cap into the Container you have to use the additional mechanical force. For example manual device equipped with a lever.

Before closing pay the attention if the Container and Dropper with Screw cap are aligned in the same axis and are not skewed relative to each other. 

## How to use

